

PARTNER ICON

P1832 ICON QUICK REFERENCE

This card provides basic operation of the most commonly used features on your security alarm system. If you need more information, please consult your owner's manual or call Amherst Alarm at (716) 632-4600.



www.AMHERSTALARM.COM



QUICK REFERENCE

Function Buttons	<p>Stay (F1) Will arm the perimeter only</p> <p>Away (F2) Will arm the entire system</p> <p>Chime (F3) Press and hold to toggle between door chime on and off</p> <p>Fire Reset (F4) Enter access code to silence alarm siren, clear smoke away from detector head, then press and hold to reset smoke detector.</p> <p>Exit (F5) Press and hold to exit through an exit delay door. Exit time is 2 minutes or until the door is closed again.</p>
Disarm the system	Enter your 4 digit security code
Duress Code	Press 4444 for a silent panic alarm (Unless your duress code has been changed)
Arm with No Delay	Press [*][9] followed by your 4 digit security code
Reset Alarms	Enter your 4 digit security code
Use of panic buttons	Press and hold for 2 seconds
Silence Troubles	Press any button on the keypad
Bypass/Unbypass a Zone	<p>Press [*][1]</p> <p>Enter zone to be bypassed/unbypassed (2-digit, ex. 03 for Zone 3)</p> <p>Press [#] to exit *Zones automatically unbypass upon disarming the system</p>
Viewing Trouble Conditions	<p>Press [*][2], Numerals will be lit according to the trouble:</p> <ul style="list-style-type: none"> 1 - Service Required, call for service. 2 - Power Failure 3 - Telephone Line Trouble 4 - Failed to Communicate 5 - Zone Fault 6 - Zone Tamper 7 - Zone Low Battery 8 - System Time (Refer to Pg.13 in Owner's Manual) <p>Press [#] to exit</p>
Viewing Alarm Memory	<p>Press [*][3]</p> <p>Zone that went into alarm will flash, press [#] to exit</p>
Adding, Changing, or Deleting an Access Code	<p>Press [*][5][Master Code]</p> <p>Enter number of user code to be edited (01 - 32) *Master code is user code 40</p> <p>To Add: Enter 4 digit code</p> <p>To Change: Enter new 4 digit code</p> <p>To Delete: Press [*]</p> <p>Press [#] to exit</p>
Setting Date/Time	<p>Press [*][6][Master Code][1]</p> <p>Enter time (0:00 - 23:59)</p> <p>Enter Date (mm/dd/yy)</p> <p>Press [#] to exit</p>

EMERGENCY PROCEDURES

In case of...	What to do...	What happens...
Accidental Alarm Activation	<ol style="list-style-type: none"> 1. Enter your access code 2. Wait for the Monitoring Response Center to call you 	<ol style="list-style-type: none"> 1. Alarm will sound until a valid access code is entered 2. Give the dispatcher your password
Fire Alarm	<ol style="list-style-type: none"> 1. Leave immediately. If you are already outside DO NOT re-enter the building 2. Follow your fire evacuation plan 3. Call 911 or fire department from a safe distance as an extra precaution 	<ol style="list-style-type: none"> 1. Alarm will sound 2. The system will automatically notify the Monitoring Response Center, who will dispatch the fire department
Burglary Alarm	<ol style="list-style-type: none"> 1. If you are already outside, DO NOT re-enter the building. 2. Call 911 or police department from a safe distance as an extra precaution 3. If you are inside the building and can leave safely, do so. 	<ol style="list-style-type: none"> 1. Alarm will sound 2. The system will automatically notify the Monitoring Response Center, who will verify the alarm before dispatching the police.
CO Alarm	<ol style="list-style-type: none"> 1. Immediately move outdoors or to an open window/door 2. Call emergency services as an extra precaution 	<ol style="list-style-type: none"> 1. Alarm will sound 2. The system will automatically notify the Monitoring Response Center, who will dispatch emergency services

WHAT THE SOUND MEANS

High volume, high pitched pulsing	FIRE
Rapidly alternating high/low pitched tone	BURGLARY or TAMPERING
Beep every 8 -10 seconds	SYSTEM TROUBLE CONDITION
4 quick beeps followed by a 5 second pause	CARBON MONOXIDE PRESENT

